


Ceiling Hoist Operating Instructions

The maximum Safe Working Load for this hoist is 200kgs; this hoist is not to be used by persons above this weight.

If the Red light is on check that the emergency toggle is pushed in, if Red light is still on DO NOT USE HOIST, contact CGG (08) 9956 6600

1 Use the controller to raise or lower the Spreader Bar to the required height


2 Attach the hooks of the sling in the lifting hangers hooks. Check the sling is securely attached before lifting the person (Fig 1a and 1b)

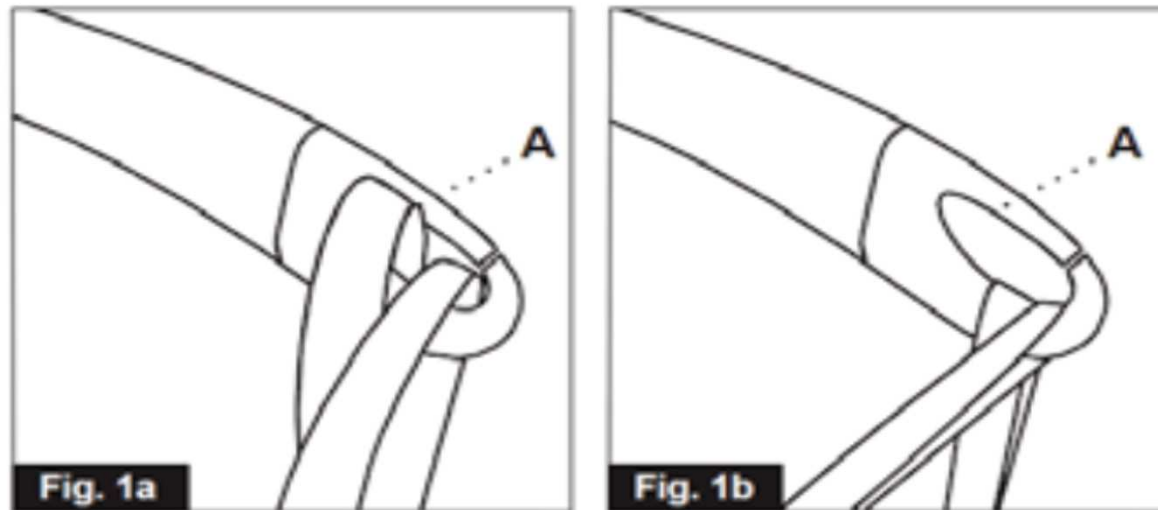

3 Check that nothing will stop the hoist from lifting the person

4 Use the control buttons to raise the person.

Up Arrow to raise

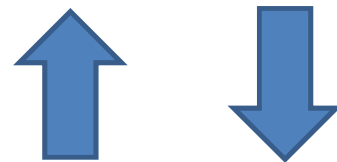


Down arrow to Lower

DO NOT USE THE CONTROLLER TO TOW PERSON


Stand behind the person and push them along the rail. The hanger bar can be used as a handle for transfers

5 Emergency Strap can be used to lower a person in an emergency. Pull the red strap continuously

Once activated the hoist will not operate until the red toggle is manually pressed in

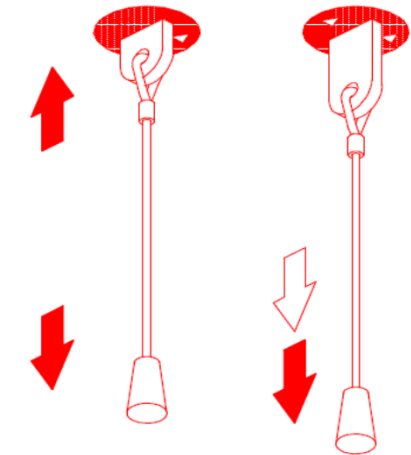

6 Warning Lights

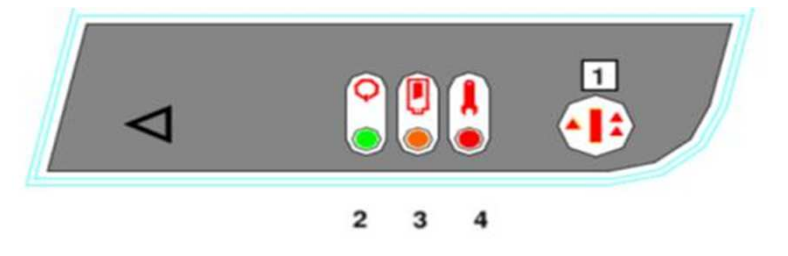

- 1 Emergency Stop / Emergency Lower
- 2 Green Light when hoist in use
- 3 Orange Flashing - needs charging
Orange Constant = On Charge
Orange Off = Charged
- 4 Red Spanner = Fault, check Emergency Toggle

**Report Faults or Damage to:
City of Greater Geraldton (08) 9956 6600**

RETURN HOIST TO THIS CORNER FOR CHARGING WHEN FINISHED